



Service Manual

MicroCommand II Control

2EC15	A2EC1-60001-79999
2EC18	A2EC1-60001-79999
2EC20	A2EC2-60001-79999
2EC25	A2EC2-60001-79999
2EC25E	A2EC3-60001-79999
2EC30	A2EC3-60001-79999

Table of Contents

Cat Lift Truck Important Safety Information	1
Specifications	2
Component Measurements	2
Current Measurements	2
Transistor Measurements	3
Transistor Connections	3
Head Capacitor	3
Control Panel Thermal Switch	4
Contactors Tip Clearance (Gap)	4
Fuses	4
Drive and Pump Motor Shunt Field Resistances	4
Control Panel	5
Systems Operation	6
Glossary	6
Location of Control Panel Components	10
Symbol Library	11
General Information	14
Programmable Setup Options	15
Accessing Programmable Setup Options	20
Operational Circuit Elements	23
Run-Time Diagnostics	26
Chat Mode	30
Contactors	30
Accelerator Control	30
Circuits	31
Drive Circuit	32
Drive Circuit	33
Power Transistors	34

Testing and Adjusting47
Accessing Stored Fault Codes47
Troubleshooting48
Troubleshooting Checklist48
Control And Power System Operational Checks51
Circuit Tests54
Troubleshooting Charts57
Systems Operation and Test Equipment125
Conductor And Switch Continuity Tests130
Contactor131
Driver Board Tests134
Traction Motor Current Sensor Test137
Hydraulics138
Actuation Circuit138
Capacitor Charging Circuit139
Hydraulic Pump Motor Circuit140
Lift Circuit148
Electrical Testing160
Testing Transistors160
Electrical System Adjustments163

A

Accelerator

Adjustment	163
Continuity Test	128
Control Diagnostic	30

B

Battery

BDI Adjustment Charts	169
Cell Voltage Test	49
Hydrometer Test	49
Load Test	49
Maintenance	49

Brakes

Parking Brake Switch Adjustment	164
Plugging Circuit	39
Regen Circuit	37
Test and Adjust Electric Brakes	167

Bypass Circuit

Circuit with Shunt Field Activated	45
Circuit Without Shunt Field Activated	46

C

Chat Mode	30
-----------	----

Circuit Tests	54
---------------	----

Circuits

Bypass	45
DC/DC Converter	31
Drive Control	32
Drive Motor	41
Drive Power	33
Failure Protection Circuit	44
Horn	31
Hydraulic Circuits	138
Plugging Circuit	39

Power Transistors	34
-------------------	----

Regenerative Braking	37
----------------------	----

Thermal Protection Circuits	44
-----------------------------	----

Contactors

Continuity Test	131
-----------------	-----

General Information	30
---------------------	----

Pump Contactor Operation Circuit	155
----------------------------------	-----

Continuity Tests

Accelerator Control	130
---------------------	-----

Contactors	131
------------	-----

DC/DC Converter	133
-----------------	-----

Diodes	133
--------	-----

Head Capacitor	130
----------------	-----

Vehicle Monitoring System	133
---------------------------	-----

Control Panel

Component Location	10
--------------------	----

Electrical Testing	162
--------------------	-----

Specifications	5
----------------	---

Thermal Protection Circuit	44
----------------------------	----

Control System Checks	51
-----------------------	----

D

DC/DC Converter

Circuit	31
---------	----

Continuity Test	133
-----------------	-----

Diagnostics

Built-In Diagnostic Operation	52
-------------------------------	----

Chat Mode	30
-----------	----

Run-Time Diagnostic Functions	52
-------------------------------	----

Run-Time Diagnostics	26
----------------------	----

Self-Diagnostics	53
------------------	----

Stored Fault Codes	47
--------------------	----

Drive Motor

Circuit	41
---------	----

Current Limit	43
---------------	----

Drive Control Circuit	32
-----------------------	----

Drive Power Circuit 33
 Electrical Testing162
 Thermal Protection Circuit 44
Driver Board Tests
 Chart135
 Drive Driver Board 134
 Pump Driver Board 134

E

Electrical System Adjustments 163
 Method A (Mechanical) 163
 Method B (Electrical) 163
Electrical Tests and Adjustments
 Accelerator Group 163
 Current Limit Test and Adjust 166
 Electric Braking167
 Harness Wiring Circuit Guide 171
 Logic Board Layout 168
 Park Brake Switch 164
 Resistor R312 162
 Transistor Replacement 161
 Transistors 160

G

General Information 14
 Glossary 6

H

Harness Wiring Circuit Guide171
 Horn 31
 Hydraulic Circuits 138
 Actuation Circuit 138
 Capacitor Charging Circuit 139
 Flyback Circuit 147
 Lift Control 148

Lift Power149
 Power Steering Idle 141
 Power Steering In Use 146
 Pump Contactor 155
 Pump Motor 140
 Pump Power Transistor Turn-Off 158
 Pump Shunt Field 145
 Pump Shunt Field Circuit 145
 Tilt and Auxiliary Control 156

L

Lift Control
 Additional Information 157
 Lift Control Circuit 148
 Lift Power Circuit149

Logics

Circuit Elements 23
 Component Tests 126
 Removal 126
 Test Board Layout168
 Voltage Check 127
 Voltage Test Chart 128

O

Operational Circuit Elements 23

P

Power Steering
 Power Steering Idle 141
 Power Steering In Use146
Power System Checks 51
Programmable Setup Options
 General Information 15
 Setup Option 1 21
 Setup Options Other Than Option 1 ...22

R

Rapid Tune-Up 165

S

Safety Information 1

Specifications 2

Stored Fault Codes 47

Symbol Library 11

Systems Operation and Test Equipment

Continuity Tests

Head Capacitor 130

T

Test Equipment 125

Testing and Adjusting 47

Thermal Protection Circuits 44

Tilt/Auxiliary Control

Tilt/Auxiliary Circuit 156

MicroCommand II Control Panel 13

Transistors

Electrical Tests 160

Power Transistor Circuit 34

Replacement 161

Troubleshooting

Charts 57

Checklist 48

Circuit Tests 54

Preparation Tests 49

V

Vehicle Monitoring System Display Unit

Circuit Test 133

General Information 24

Cat Lift Truck Important Safety Information

Most accidents involving product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "WARNING" as shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning, explaining the hazard, can be either written or pictorially presented.

Operations that may cause product damage are identified by NOTICE labels on the product and in this publication.

Mitsubishi Caterpillar Forklift America Inc. (MCFA) cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are therefore not all-inclusive. If a tool, procedure, work method or operating technique not specifically recommended by Mitsubishi Caterpillar Forklift America Inc. (MCFA) is used, you must satisfy yourself that it is safe for you and others. You should also ensure that the product will not be damaged or made unsafe by the operation, lubrication, maintenance or repair procedures you choose.

The information, specifications, and illustrations in this publication are on the basis of information available at the time it was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service given to the product. Obtain the complete and most current information before starting any job.

Cat lift truck dealers have the most current information available.